
boyd acoustic

Whiteboard Milford Installation Instructions

- 1. Your Acoustic Whiteboard Milford already has female clips installed on the rear of your board.
- 2. To install your Acoustic Whiteboard Milford on the wall simply click the red centre locator (supplied with your board) into the female clips attached to the rear of your board.
- 3. Repeat this step so each female clip has a red centre locator.
- 4. Determine where you want the Acoustic Whiteboard Milford installed on the wall. Using a pencil, mark a level line on the wall at the bottom of the board and on one side of the board. Line up your Acoustic Whiteboard Milford with your pencil lines (or use a level on the top of the panel) and simply press into the wall ensuring each red centre locator on the rear of the board marks the wall.
- 5. Screw the male clips into the wall using the centre locator marks you have just made. We recommend using a wall plug where a stud is not available.

Female clip



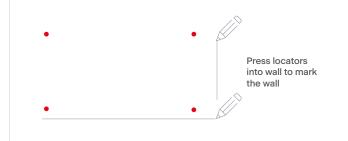




6. Discard the red centre locators.

T +64 9 271 2020

boydworkspaces.co.nz

7. Clip your Acoustic Whiteboard Milford into place on the wall.

Please note your Acoustic Whiteboard Milford is removable should you wish to do so. If you intend to regularly remove the board from the wall OR your substrate is not strong, we recommend screwing AND gluing your clips into the wall as pictured below.

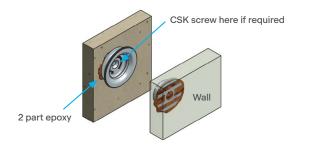

f 🖸 in